


Looking at back of gauge assembly

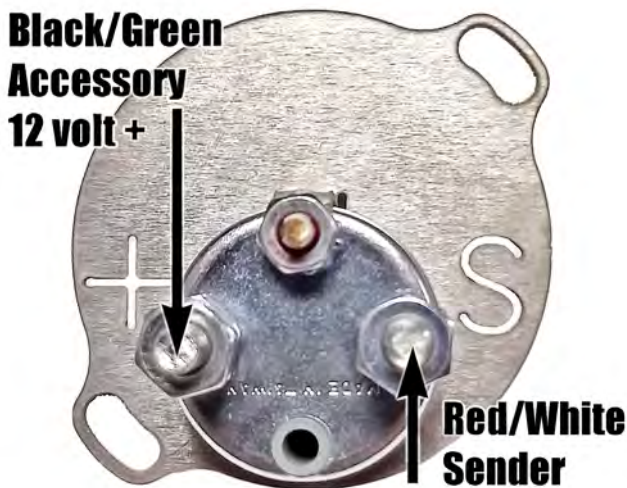


CASCO Replacement Temperature Gage Kit



Troubleshooting Gauge and Sending Unit Sets

Problem	Possible Cause
Needle stays at zero	12 volt in (accessory) on gauge not connected Wire from sender on gauge not connected 12 volt in (accessory) & wire from sender are switched Sending unit not grounded
Needle goes to full scale	Insufficient grounding of gauge Wire from sending unit is grounded somewhere

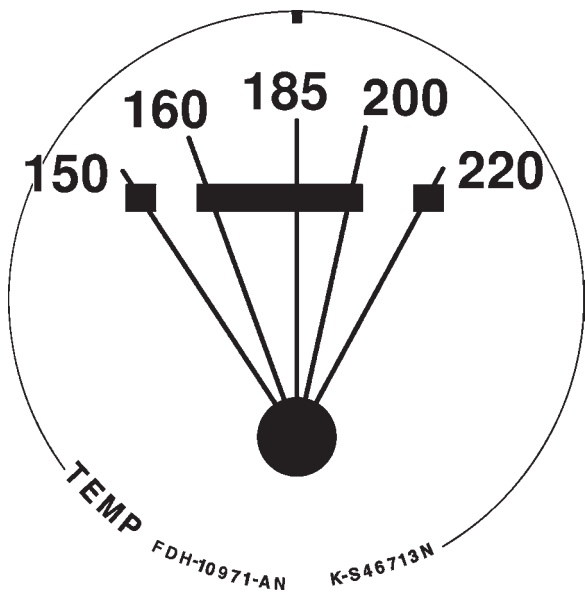

The graphic above shows the approximate temperature in degrees F ($\pm 5F$) that this gauge will indicate for various needle positions. These readings assume that the accessory voltage is 13 volts.