

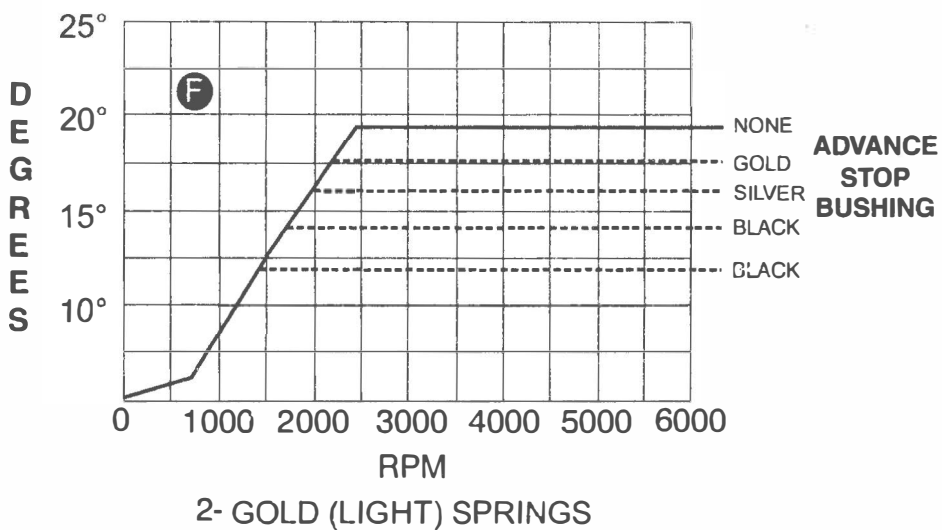
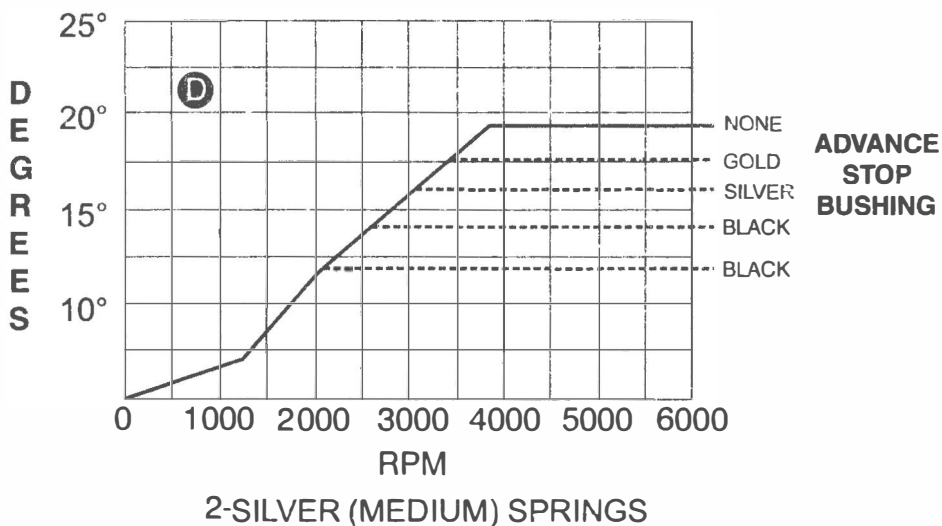


ADVANCEMENT DISTRIBUTOR CHART

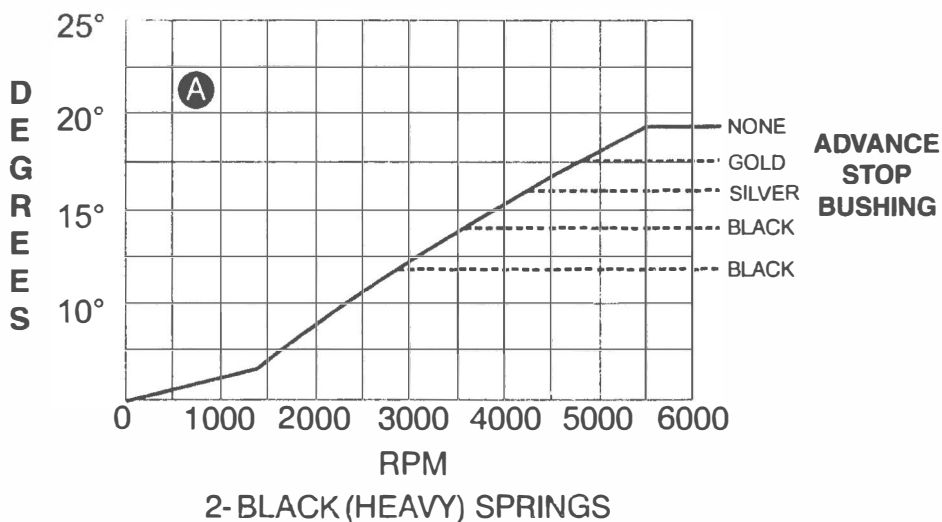

PRO-SERIES READY TO RUN INSTALLATION

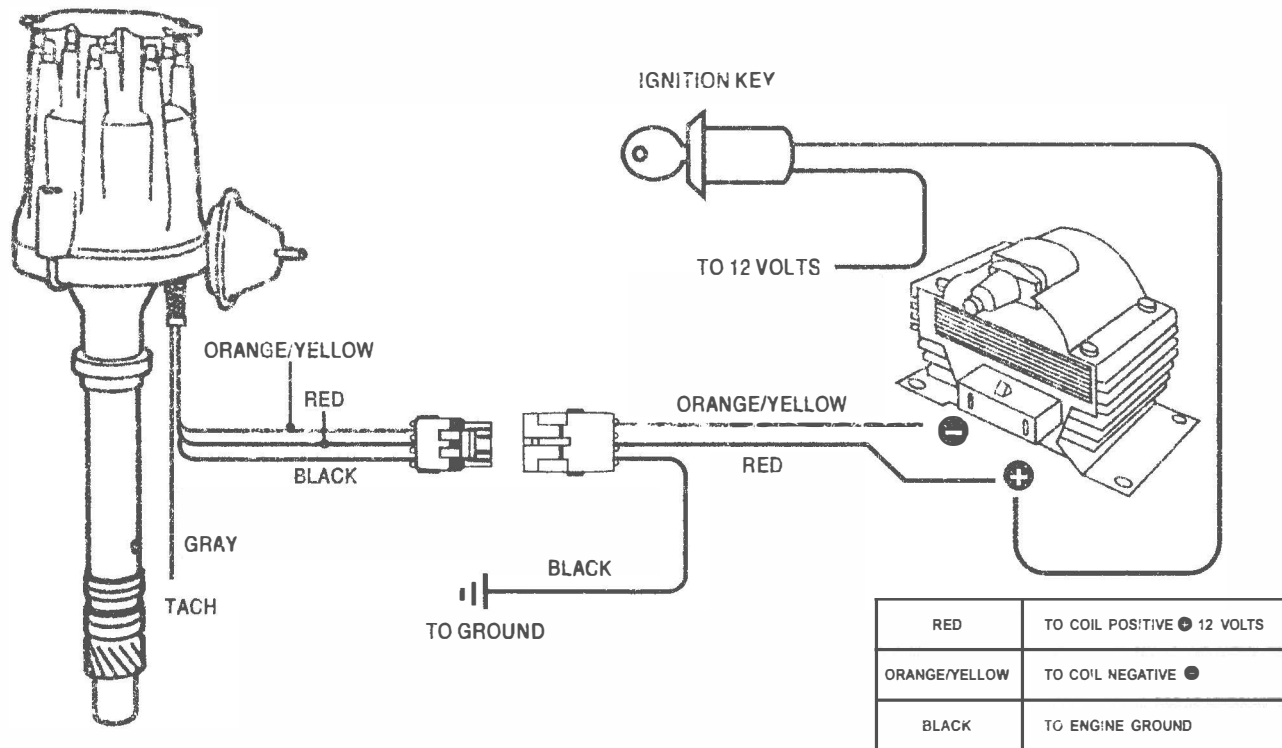

WARNING: This distributor is not compatible with stock points distributor coil, must use high output coil. Must bypass ballast resistor if applicable.