

Under Dash:

Remove stock flasher: Disconnect the wires from the stock flasher. If your flasher also has a small jumper wire to change the gender of one of the terminals, also remove the jumper from the wiring system.

Install electronic flasher: Attach the black wire to any good ground. In our shop we use the attachment screw on the back of the temperature gage. Caution: Do not connect black wire to any of the electrical *studs* on the back of the gage. The red wire of the flasher unit is attached to the orange wire. This wire is the wire which runs to the accessory terminal of the ignition switch. Attach the green wire of the flasher unit to the blue wire. The blue wire is the wire that runs to the turn signal switch. Individually wrap insulating tape around the push on connections to make sure no short circuits occur.