


Looking at back of gauge assembly

**Black/Green
Accessory
12 volt +**

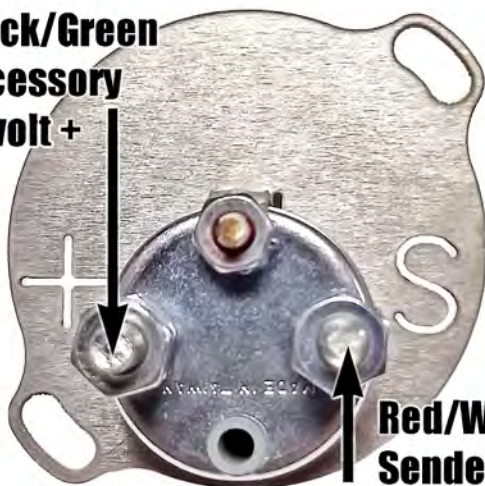

**Red/White
Sender**

CASCO Replacement Fuel Gage Kit



**Troubleshooting Gauge and
Sending Unit Sets**

Problem	Possible Cause
Needle stays at zero	12 volt in (accessory) on gauge not connected Wire from sender on gauge not connected 12 volt in (accessory) & wire from sender are switched Sending unit not grounded
Needle goes to full scale	Insufficient grounding of gauge Wire from sending unit is grounded somewhere