This tool is designed to safely and easily compress the starter bendix spring. This tool has been specifically designed for your Little Bird. If you have any questions or comments, please call our technical help line at 740/622-9700.

Installing new bendix on a new starter

- 1. Assemble the tool so that the wing nuts are on the spring end of the bendix. Making sure to align the slot on the side of the plate with the internal pin.
- 2. Screw wing nuts until the internal pin hole is exposed. At this time the pin will easily slide out of the assembly so don't let it fall out and get lost.
- 3. Slide bendix assembly onto the starter shaft and align pin hole in the starter shaft with pin holes in bendix. Drop in the retaining pin and loosen the wing nuts until you can remove tool from the starter assembly.





