

Alternator Connections

Attach the wires from your original "generator to regulator" wiring loom to the terminals as described.

- Attach your <u>armature</u> wire to the BATTERY post
- Attach the <u>field wire</u> to the <u>Warning Light</u> post
- Attach the ground to the GROUND post



Note: A stud to connect the ground is provided. Although the ground wire in your loom does not actually need connected to the unit since it is internally regulated. However, it looks better than just hanging there.



ORIGINAL GENERATOR WIRING DIAGRAM



ALTERNATOR WIRING DIAGRAM

MOVING LARGE ARM WIRE TO JOIN ON BATTERY.
REMOVE THE SMALL WIRE FROM ARM, INSTALL THE FIBER
INSULATOR BLOCK TO THAT TERMINAL. ATTACH THE WIRE
FROM THE FIELD TERMINAL AND THE SMALL WIRE THAT WAS
REMOVED FROM ARM (ALONG WITH THE CONDENSOR IF YOU
WERE USING ONE) TO THE FIBER BLOCK TERMINAL.
WIRING SHOULD NOT CONTACT OLD ARM TERMINAL!





OEM cast iron mounting bracket and belt adjustment arm not included in the kit. Photos for assembly details only.