

Headlamp Door Repair Kit



Thank you for purchasing our repair kit for the 1955-1957 headlamp doors. We have used this in our own restoration shop with excellent results. You will find that with this kit your headlamp door will locate center with the new prong and also on the sides of the 13008T clip for extra support.


Tools:

Sand or bead blaster
Small spring clamp(s)

Installation:

1. Prepare the bonding area inside the headlamp door by degreasing and removing all paint and scale. We reccomenrd lightly sandblasting or bead blasting.
2. Test fit the stainless clip. Note that the clip needs to be installed as close to the original location of the broken cast prong.
3. Once you are comfortable how the new clip will be installed, mix up the included urethane adhesive.
4. Put adhesive on the back side of the clip and install it onto the headlamp door casting. Some adhesive should squeeze through the slit in the clip.
5. Lightly clamp the clip and casting assembly and let it cure for 7 days or so before installing on the car.

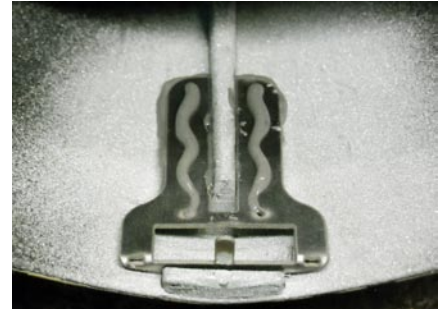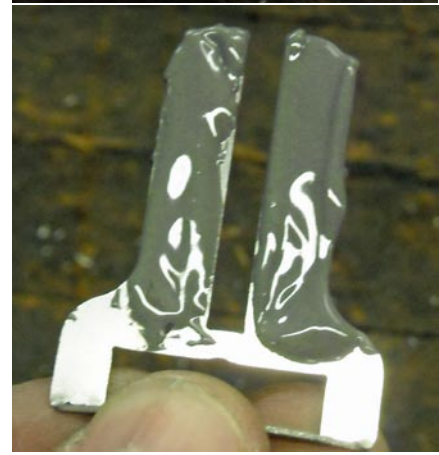

If you have any questions or comments please call our technical assistance line at 740/622-9700. 

13064R Headlamp Door Repair Kit