


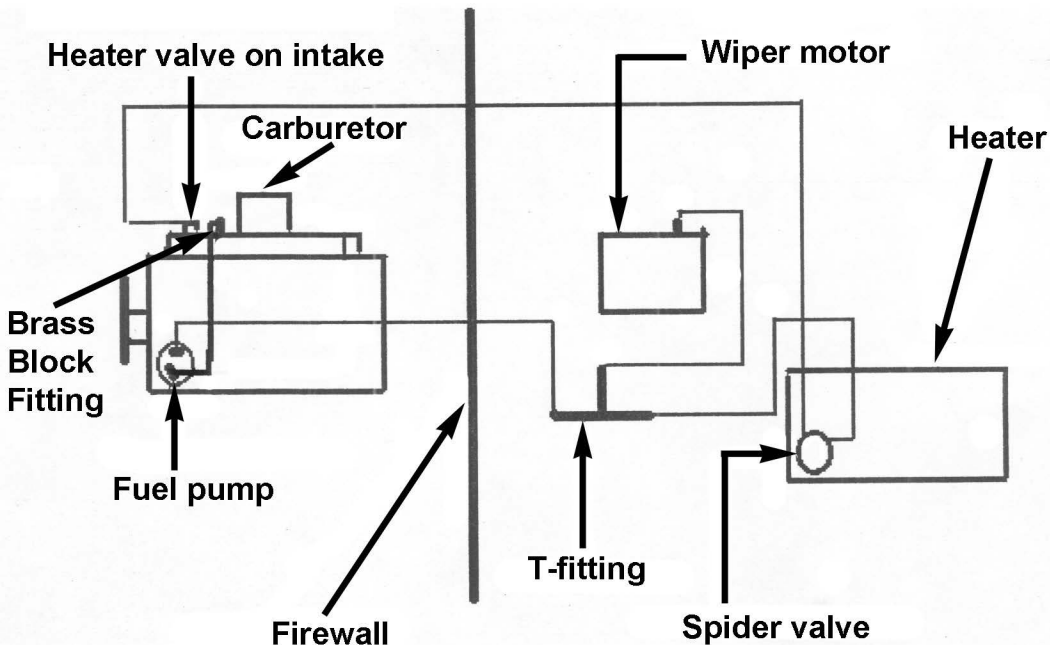
Vacuum Hose Kit 17543B

The hoses in this kit are installed in the locations shown below. The lengths listed are nominal lengths:


<u>Length</u>	<u>Location</u>
3".....	Attach one of each of these between the pipes on the top of the fuel pump and the metal vacuum lines above the fuel pump.
30".....	Attach one end to the metal vacuum tube from the fuel pump through the firewall and into the "T" fitting behind the dash.
13".....	Attach this hose between the "T" fitting behind the dash to the heater control spider valve located on the heater plenum.
6".....	Attach one end to the "T" fitting behind the dash and the other end to the vacuum wiper motor.
80".....	Attach one end of this tube to the spider heater control valve through the firewall and then attach to the vacuum water control valve located at the front of the intake manifold.

If you have any questions or comments please call our technical assistance line at 740/622-9700. 

Vacuum Hose Routing for Heater and Wiper Motor 1955 Thunderbird



Vacuum Hose Routing for Heater and Wiper Motor 1956 Thunderbird

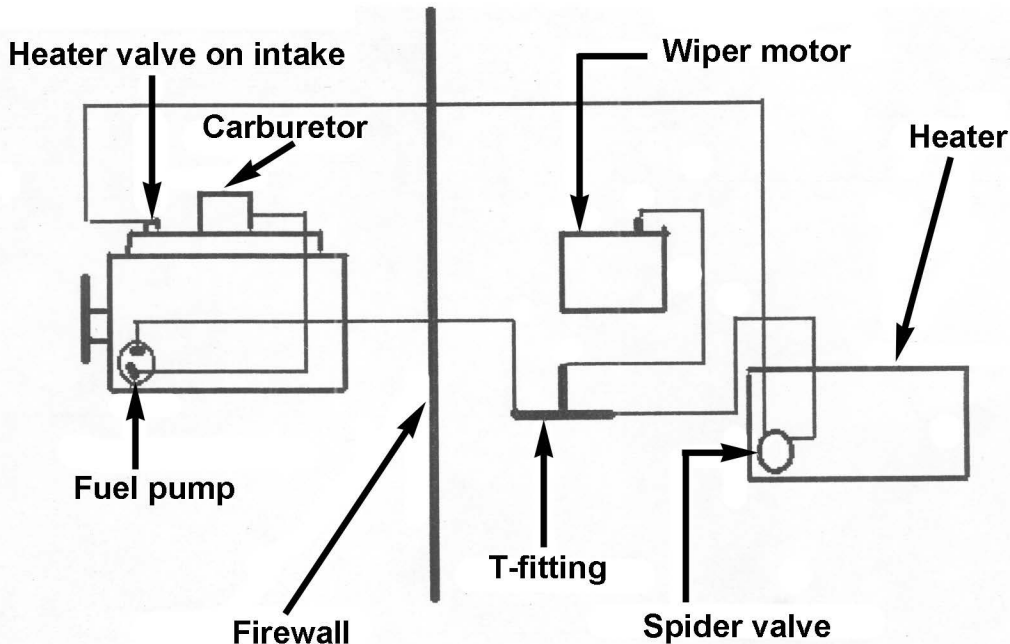

Vacuum Hose Routing for Heater and Wiper Motor 1957 Thunderbird

