


50000B Soft Top Tackstrip Installation

5.75" long material
used on both ends glue into place
and bend tabs to hold

60.5" long piece wide material
force into channel with glue

4.5" long material
glue into place bend tabs over
to hold

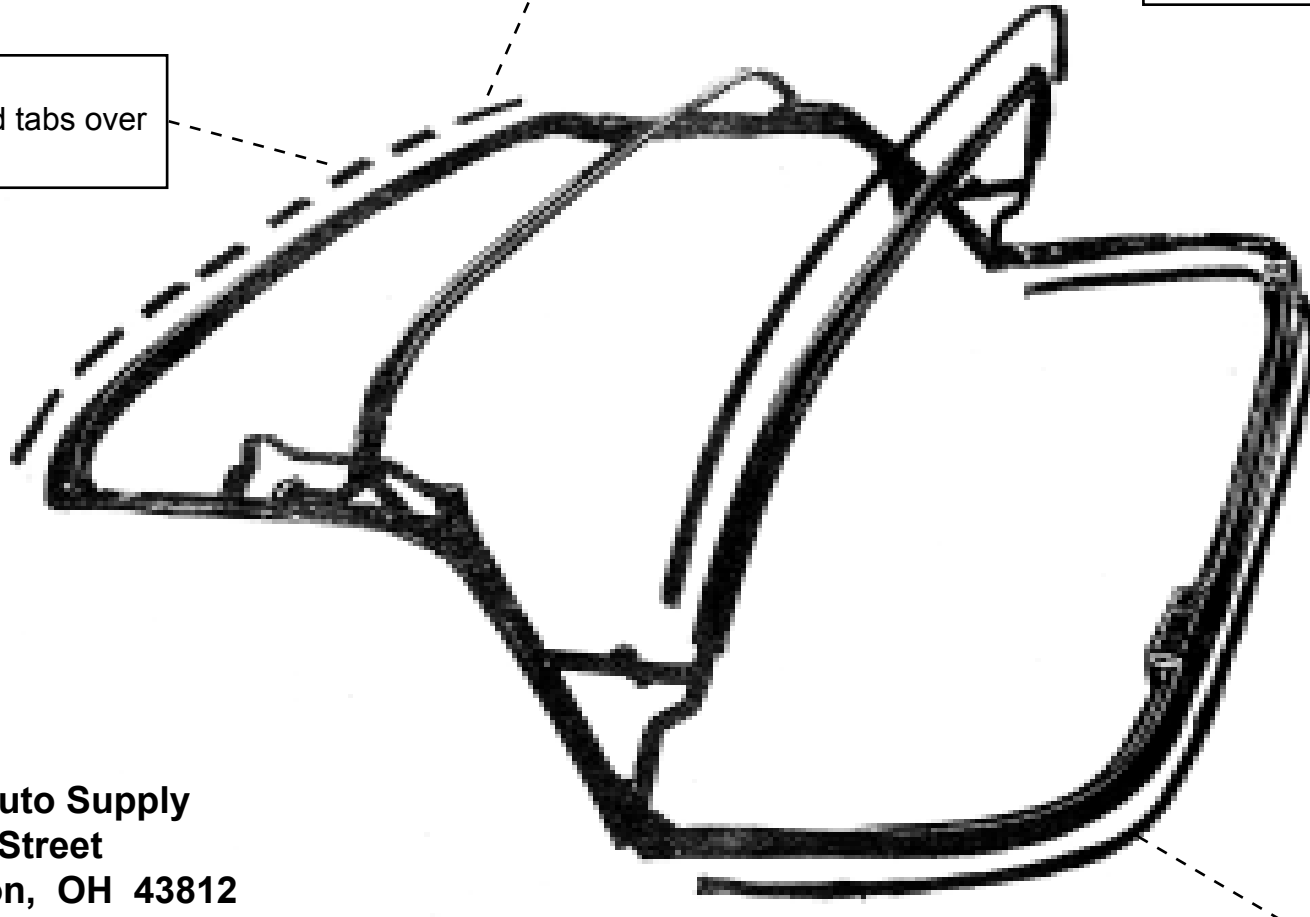

Classic Auto Supply
795 High Street
Coshocton, OH 43812
740/622-8561



Attach channel with short rivets - everyother hole skip end holes.
Attach 88.5" thick tach strip with long rivits everyother hole.
A long rivet must be used on the ends!