


*Thunderbird Specialists*  
**CASCO**  
SINCE 1969

Front Sway-Bar Installation

Front sway-bar installation is the same as stock except at the bushings. Install as shown adding more shims for clearance. Generally only one shim per side is required. If you have additional questions or concerns, please call our technical help line at 740/622-9700.

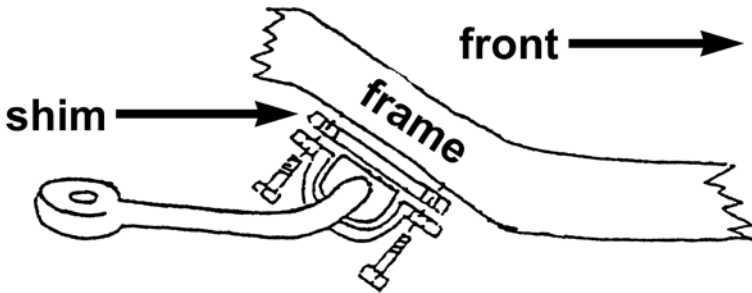

Classic Auto Supply Co., Inc. 795 High Street Coshocton OH 43812

Parts: 740/622-8561 Restorations: 740/622-9700 Fax: 740/622-5151

